

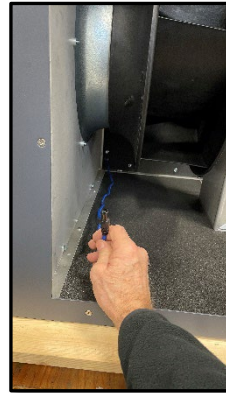


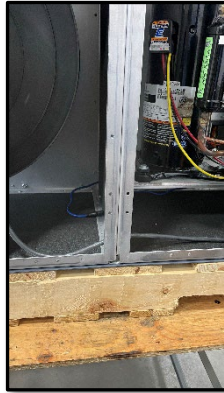


UV AIR PURIFIER

INSTALLATION INSTRUCTIONS

1. Turn off power to the **Indoor Air Handler** and remove the left side **Compressor Access Panel** cover, the **Electrical Panel** cover, and the four ICM Control Plate screws (allowing it to fall out).
2. Remove the **UV Ballast** from its packaging and place it inside the **Compressor Access Panel**.
3. Guide the **UV Ballast Wires** through the hole in the **Electrical Panel**, up to the **Terminal Strip**. Connect the **Black Wire** to the **U Terminal** and the **Red Wire** to the **V Terminal**.

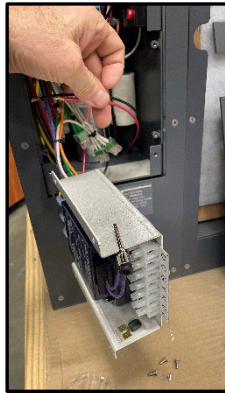

4. Feed the **Blue Wire** from the **UV Ballast** through the hole in the bottom right corner (below the Compressor) to the fan supply air end of the unit.
5. Connect the **UV-C Bulb** to the **Z Magnet** holder base using the supplied nuts (included in the small bag).
6. Carefully attach and mount the **Z Magnet** to the side panel wall, carefully ensuring that the **UV-C Bulb** does not make contact with any metal.
7. Line up the **Blue Wires**, pushing the **UV-C Bulb Wire** into the **UV Ballast Wire**, attaching them together so that they are securely connected. Make sure that the **Wires** do not come in contact with the **Blower Fan** by keeping the remaining excess inside the **Compressor Access Panel**.
8. Turn on system power and begin utilizing DNA sterilization and photo-oxidation to disinfect the air, killing mold, bacteria, and viruses whenever the **Blower Fan** is operating.

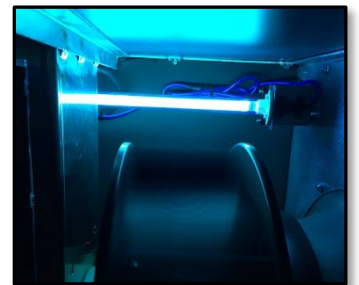

For more information, please visit:
www.excelairsystems.com/uv-purification